


Emu41/71 -PC // RS232 ---- RS232 // HP82164 + HP-41/71

Cable between PC COM port and HP-IL/RS232 interface:

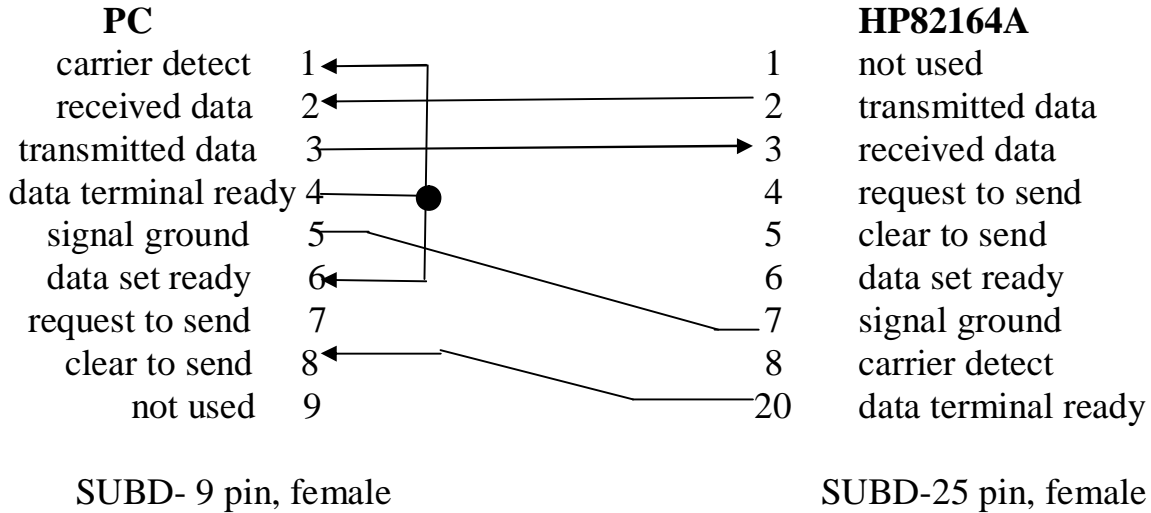

Routine to disable software protocols and activate hardware handshake mode:

HP-41 (X-I/O module needed):

```

01 LBL "SETRS"
02 66
03 FINDAID
04 SELECT
05 REMOTE
06 "LI5"
07 OUTA
08 "C0"
09 OUTA
10 NOTREM
11 END
    
```

HP-71:

```

10 ! --- SETRS ---
20 D=DEVADDR( "%66" )
30 REMOTE
40 OUTPUT D;"LI5;C0"
50 LOCAL
60 END
    
```