# PIL-Box kit notes


J-F Garnier, Feb 2010

## **Kit content:**

- 1 programmed PIC16F628A MCU
- 1 20 MHz crystal
- 1 18-pin DIL socket 1 FTDI UB232R USB module
- 1 PCB "PIL-Box 1"
- 1 housing G403
- 1 passive part set (resistors, capacitors, diodes, LED)



## **PCB** layout:

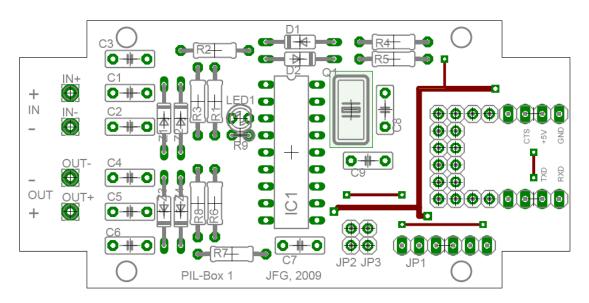

### **Bill of Material:**

R1, R2: 220 Ohms R3: 10 kOhms R4, R5: 22 kOhms R6, R7, R8: 150 Ohms

R9: 470 Ohms – vertical mounting, used only if LED1 is mounted

C1, C2, C4, C5: 22 nF – 100V rating

C3, C7: 100 nF C6: 100 pF C8, C9: 22 pF D1, D2: 1N4148 Z1, Z2, Z3, Z4: BZX55-5.1V

LED1: 3mm LED, red (optional) – cathode (shortest lead) towards IC1

Q1: 20 MHz crystal

IC1: Microchip 16F628A (on socket)

USB module: FTDI UB232R



Note: the screw connectors are not provided with the kit, the HP-IL cables are soldered directly to the PCB.


## **Housing making:**



Left: HP-IL cable back panel. Right: USB port front panel. Note that the font and back panels have a top and bottom side. The top side is indicated by the small mark on the middle of the top (visible here on the HPIL cable panel).



For the USB panel, the two slides have to be reduced to let the USB module fit in nicely. Don't remove the slides completely otherwise the board will no more stay in place:

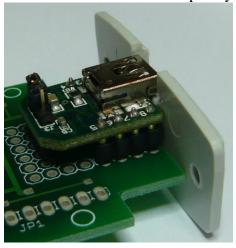

For installation of the PCB into the housing, and wiring of the HP-IL cables, please refer to the "PIL-Box set-up" document.


#### **PIL-Box Board Test:**

Plug a USB cable to the PIL-Box. The LED should blink 3 times. If yes, the MCU is working correctly.


Start ILPer. If the PIL-Box is found, the USB module and connection to the MCU are correct. Connect a HP-41C or HP-71B to the PIL-Box:

- H-P41C: Enable the scope mode of ILPer. Power-up the HP-41C. The LED should stay on (actually blinking at high rate).
- HP-71B: Power up the HP-71B. Enable the scope mode of ILPer. Do "RESTORE IO" on the HP-71B. The LED should blink briefly.

The first HP-IL frames in the scope window should be: "IFC AAU AAD 01"

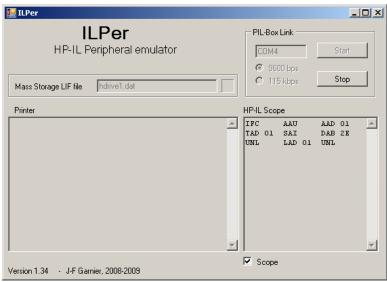

ILPer test screen with the HP-41C

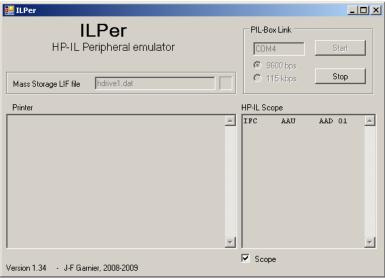

ILPer test screen with the HP-71B